


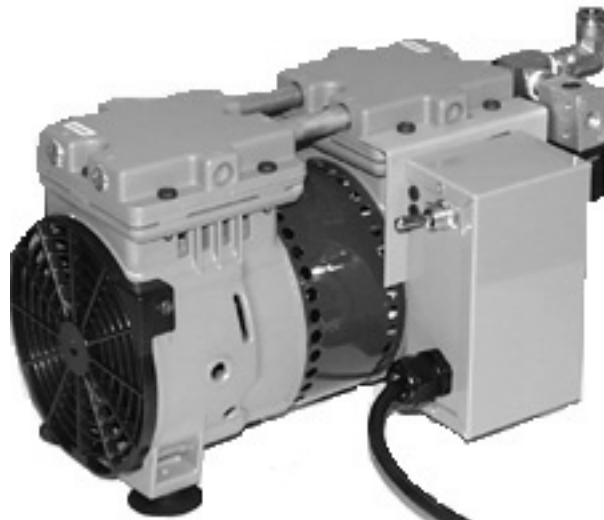

OIL-LESS DUAL DIAPHRAGM VACUUM PUMP

F136-1115-1
F136-1115-6

OPERATORS MANUAL



BEFORE USING PUMP PLEASE READ THESE
IMPORTANT INSTRUCTIONS

OPERATION

1. Connect the vacuum line to the pump.
2. Connect the other end of the vacuum line to your 2700 Control Console.
3. Connect the electrical cord* to a grounded source of electrical power.
4. Turn on the pump by switching the rocker switch on the side of the unit.
5. You may now conduct tests with your 2700 system

*NOTE: The F136-1115-6; 220 VAC Vacuum Pump is shipped without a male electrical plug, due to the wide range of different plugs used around the world. It is the responsibility of the user to properly install the appropriate male plug following all applicable electrical codes and standards for the area in which the unit will be used.

Specifications (115V / 220V)

Head Configuration	▸ Pressure or Vacuum
Vacuum Flow Rate @ 0 In. Hg. (CFM)	▸ 3.15 / 2.70
Vacuum Flow Rate @ 10 In. Hg. (CFM)	▸ 1.60 / 1.40
Restart Vacuum (in/HG)	▸ 0 / 0
Maximum Continuous Speed (RPM)	▸ 1600 / 1290
Horsepower (HP)	▸ 1/3 / 1/3
Electrical Rated Load (Run) (Amp)	▸ 4.70 / 1.60
Electrical Rated Load (Start) (Amp)	▸ 12.8 / 3.80
Electrical Rated Load (Power) (W)	▸ 470 / 325
Temperature Range - Ambient (F.)	▸ 50-104 / 50-104
Thermal Protector	▸ Yes / Yes
Maximum Vacuum (in/HG)	▸ 27.6 / 27.6
Weight - Compressor, Pump (lbs)	▸ 17.0 / 17.0

Test-A-Pack Systems
Carleton Technologies Inc.
10 Cobham Drive
Orchard Park, NY 14127
1-888-827-7225